

# T ECHNICAL INFORMATION




New Tool

**Models No.** ▶ HR5000K

**Description** ▶ MAKITA Rotary hammer

## CONCEPT AND MAIN APPLICATIONS

The purpose of developing this machine is that it should be as light as #HR3850. And with the same capacity to bore and chisel as that of #8050. You can change [Rotation+Hammering] to [Hammering Only] easily by operating the lever. Grease Pack System is applied for lubrication. The shank of attaching tools for #HR5000 is in common with Bosch Spline Shaft type, and #HR5000K is in common with Kungo hexagonal shaft type respectively.

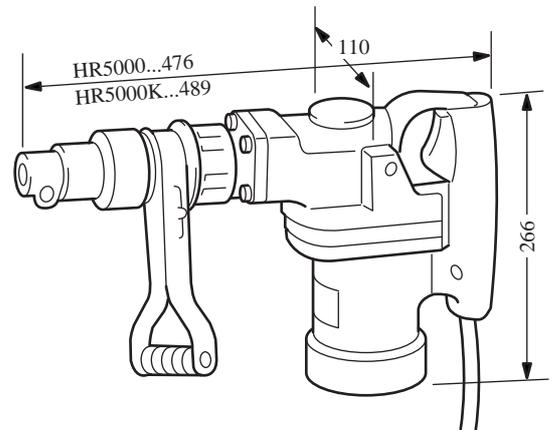

### ► Specifications

Voltage (V)	Current (A)	Cycle(Hz)	Continuous rating		Max. Output(W)
			Input(W)	Output(W)	
100	14.0	50/60	1320	730	1400
115	11.0	50/60	1200	600	1400
200	6.3	50/60	1200	600	1400
220	5.7	50/60	1200	600	1400
230	5.4	50/60	1200	600	1400
240	5.2	50/60	1200	600	1400

<b>No load speed (R.P.M.)</b>		260/min	
<b>Blows per minute (/min.)</b>		2100/min	
<b>Max. capacity (mm)</b>	<b>T.C.T. bit</b>	50mm	
	<b>Core bit</b>	<b>for concrete</b>	150mm
		<b>for Hume concrete pipe</b>	255mm
<b>Net weight (kg)</b>	<b>HR5000</b>	9.6kg	
	<b>HR5000K</b>	9.7kg	
<b>Power supply cord (m)</b>		5m	

### ► Standard equipment

- Hex. spanner 4
- Hex. spanner 5
- Hex. spanner 6

### ► Optional accessories


Reffer to General catalogue

The standard equipment for the tools shown may differ form country to country.

## REPAIR

### 1. Principal tools to be prepared

- (1) Vice fixed on the work table
- (2) Pipe wrench( 60cm or more, the longer it may be, the easier for operation).
- (3) Backplate a) Copper plate, 2pcs (Used when put Clunk Housing between Vices)  
b) Iron plates, 2pcs of the dimensions in the illustration(Used when put Cylinderliner between vices)

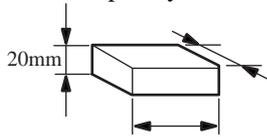


### (4) Bullpoint

### 2. Disassembly

#### A) How to remove Tool Holder(left screw) and Barrel


As you see the right illustration, put a backplate (copper plate) on the side of Clunk Housing (for protection of Clunk Housing), fix it by Vice, and put two Sides of Bullpoint inserted into Tool Holder by pipe wrench , then turn it to right

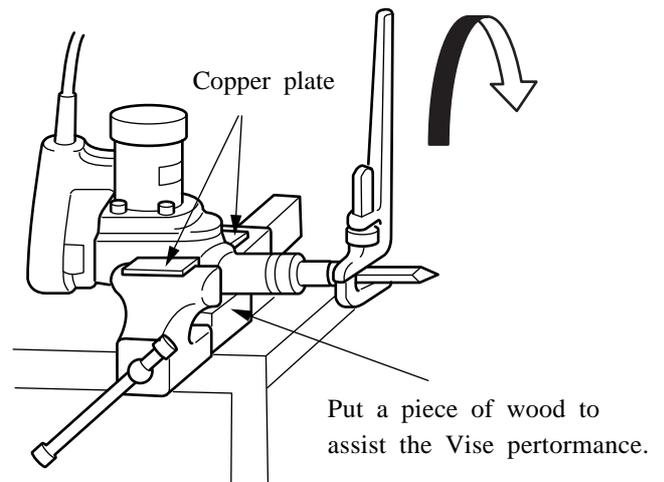

B) How to remove Cylinder liner(right screw) and Hexagonal nut

As you see the right illustration, put a backplate on two sides of Cylinder liner, fix it by Vice, hold two sides of Hexagonal nut by pipe wrench, and turn it to left.


Becomes loose by left turn

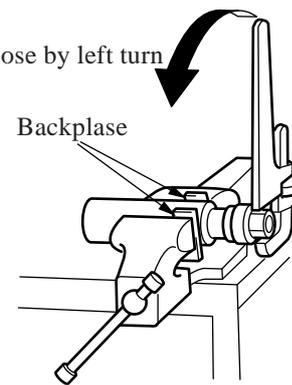

Note 1) If the screws did not loosen in disassembling of A)and B), heat the screw part over the gas stove about five minutes to 200- 250 C. Then, it will be loose because the adhesive effect becomes weak.

C) How to remove Clunk Shaft


Make the Clunk Cap side of Clunk Housing downward, press the end face of Clunk Shaft by rbor Press, and it will come out.

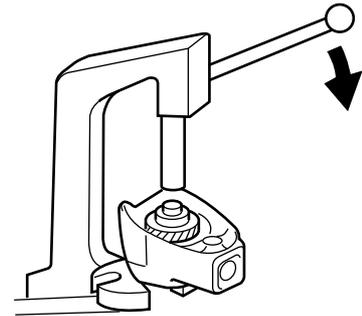

3. Assembly

A) How to fasten Cylinder Liner and Hexagonal Nut


- 1 ) Remove grease from Screw part, and apply Primer T747 (Note2) .
- 2 ) Insert Flat Washer and Ballbearing
- 3 ) When the surface applied Primer gets dry(in about 3-5 minutes), apply Locktight 648 , three lines (Note 3)

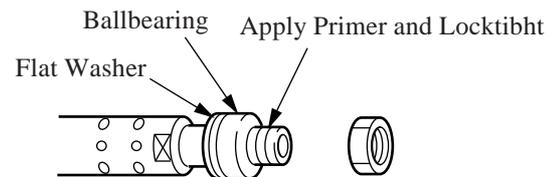

- 4 ) Fasten Hexagonal Nut (Width between two faces:41mm)by 2000-2500kgf.cm(with 60-cm pipe wrench, approx. 33kgf. Strength)

Note2) Primer T747 is hardening promotion agent to shorten the time forhardening Locktight 648(adhesive).


Note3) Three lines mean to apply the adhesive three times in the shaft direction.

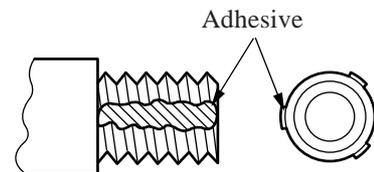

B) How to fasten Tool Retainer and Hexagonal Nut

- 1 ) Remove grease in Screw part
- 2 ) Apply Locktight 648 two lines(times).
- 3 ) Fasten Hexagonal Nut (Width between two faces:13mm)with 250-300kgf.cm

At 10cm, strenght of approx. 25kg.f

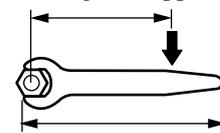

JIS spanner 13

C) How to fasten Tool Holder and Barrel

- 1 ) Remove grease in Screw part
- 2 ) Apply Screw Lock Super1342 two times.
- 3 ) Fasten with 3000-3500kgf.cm. ( Approx. 50kgf strenght by 60-cm pipe wrench)

D) In Oil Seal, Y Ring and O Ring, etc., apply grease on Lip parts and attach carefully so that it may not be damaged.

E) After assembling, enclose MAKITA GREASE R No.00, 75-80 g(the vakue when there is no grease in Housing) from Clunk Cap part.

4. The assembly and disassembly except the above are almost the same as those of #HR3850.