 


Makita

Rechargeable Fluorescent Light

MODEL ML701

INSTRUCTION MANUAL

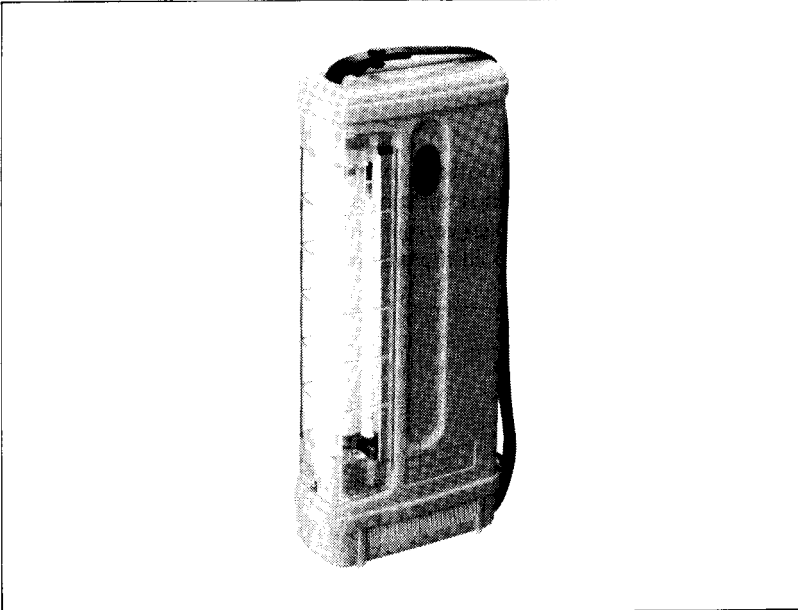

SPECIFICATIONS

Power source	Fluorescent tube	Continuous use	Illumination	Dimensions	Net weight
Makita battery cartridge Model 7000 DC7.2 V (rechargeable Ni-cd)	FL4W	2 Hr.	100 lux.	44 mm x 90 mm x 209 mm (1-3/4" x 3-1/2" x 8-1/4")	230 g (0.5 lbs.)

* Manufacturer reserves the right to change specifications without notice.

• Note : Specifications may differ from country to country.



IMPORTANT POINTS TO REMEMBER:

1. Do not use in the rain or wet locations.
2. If the light does get wet, it should be dried off thoroughly before operating. This should be done as quickly as possible.
3. Do not use the light when temperature is below 0°C (32°F) or above 40°C (104°F).
4. With a fully charged battery, the light will operate for approximately 100 minutes. After 100 minutes of total operating time, the light may go out suddenly at any time. If you must rely on the Makita light as your only source of light, it is advisable to keep a spare, fully charged battery cartridge close at hand.

HOW TO USE


Loading Battery Cartridge

Slide the case cover on the bottom to the arrow direction, then lift it up. Make sure the plus and minus terminals on the battery cartridge are on the same sides as their respective marking on the lip of the battery case. Slide in the battery cartridge all the way before closing the case cover.

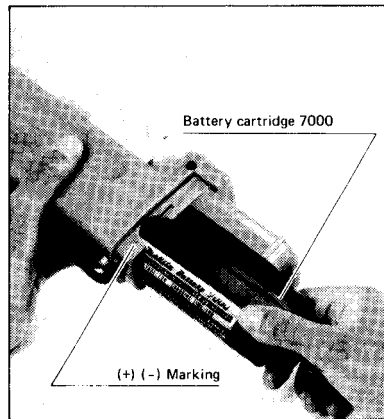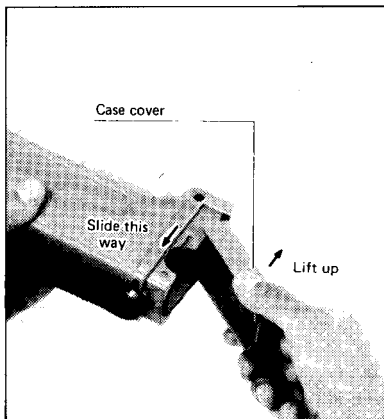

REPLACING FLUORESCENT TUBE

1. Always turn the light off and remove the battery cartridge before replacing fluorescent tube.
2. Unscrew the light cover and replace the fluorescent tube. See right Fig.
3. Replacement fluorescent tubes are readily available from your Makita dealers, or Makita Authorized or Factory Service Centers.
Always specify tube type FL4W.

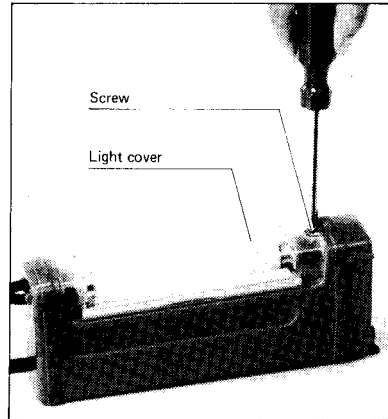

MAINTENANCE

Use a cloth dampened in a mild detergent to clean off the fluorescent light form time to time. Then wipe dry with a dry cloth. Benzine, thinner and other volatile agents will damage the plastic, so never use them.

ACCESSORIES

Lanyard (cord)

Makita Corporation

3-11-8, Sumiyoshi-cho,
Anjo, Aichi 446 Japan

883420 — 1

PRINTED IN JAPAN
1991 — 6 — N