# ECHNICAL INFORMATION



For ModelsDescription

For Models >> UH4030,UH4830,UH5530,UH6330


**Description** Hedge Trimmers

## Conception and main applications

New Hedge trimmers with Clutch and Double hand- switches, of which handle shape was completely changed for easy operation of various working postures in trimming horisonlal/vertical faces of hedges. Comparing to existing UH4520 series, the cost and weight has been reduced, and Electric brake to stop Blade within 0.5 sec. is attached.

 Blade length:
 UH4030
 400mm
 UH4830
 480mm

 UH5530
 550mm
 UH6330
 630mm

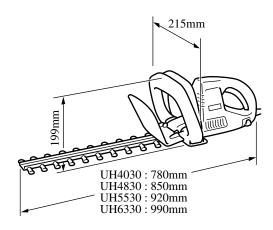

### ► Specifications

Voltage(V)	Current(A)	Cycle(Hz)	<b>Continuous Rating(W)</b>		Max. Output(W)
voltage(v)	Current(A)	Cycle(HZ)	Input	Output	
220-240	2.3	50-60	500	230	400


No load speed	1500rpm	
Effective blade	UH4030	400mm
length	UH4830	480mm
	UH5530	550mm
	UH6330	630mm
Net weight	UH4030	3.0kg
	UH4830	3.1kg
	UH5530	3.2kg
-	UH6330	3.3kg
Power supply co	0.3m	

#### **Standard equipment**


Blade cover

### ► Repair


- 1 Disassembly of Housing
- (1) Loosen Tapping screws/Flange PT4x20s (2 pcs) fixing Protector with Grip, and take away Protector.

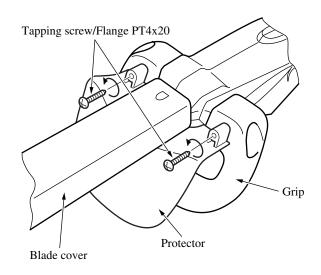

(2) Loosen Pan head screwM5x25s(2pcs) fixing Grip with Housing, and pull out Grip toward the arrow direction, extending it outside a little.

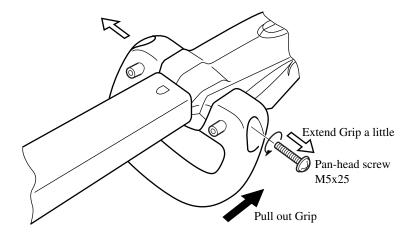


(3) Loosen Tapping screwsPT4x20(8pcs) fixing Housing R/L and Pan-head zscrew M4x40s(2pcs) fixing Shear blade assembly, and separate Housing R from Housing L.

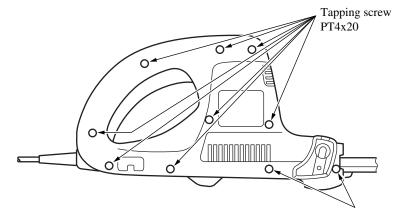


#### 2 Replacing Gear Assembly65

When replacing Gear assembly65, apply Makita Grease No.1 --- 0.5g to Pin 8, 2 g all around Helical gear 65, and 1 g on outer circle of Crank respectively.

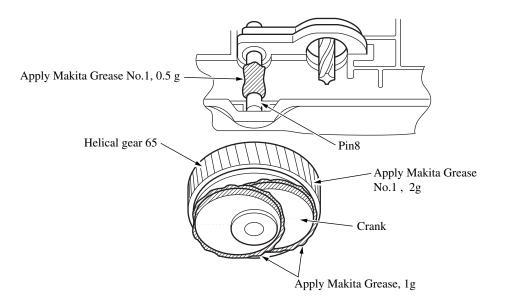

3 Replacing Shear blade assembly

When replacing Shear blade assembly, put Shear Blades, A and B, into driving Crank each, and place them into positioning Pin for Housing L surely.

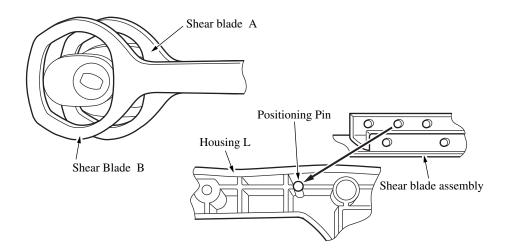

4 Tightening torque of Tapping screw/Flange PT4x20 Tighten them with tool setup torque , 13~18 kgs.cm.

## Wiring Diagram

For 220/240V areas (Europe, Asia, Oceania)

